

# User Guideline

## Ultracur3D® EL 4000

The following User guideline is for professionals who use: **Ultracur3D® EL 4000**.

The safety data given in this publication is for information purposes only and does not constitute a legally binding Material Safety Data Sheet (MSDS). The relevant MSDS can be obtained upon request from your supplier or you may contact BASF directly at [sales@basf-3dps.com](mailto:sales@basf-3dps.com).

**For more information, please refer to the country specific MSDS for advice.**

### **Manufacturer**

BASF 3D Printing Solutions GmbH

69115 Heidelberg

GERMANY

E-mail address: [sales@basf-3dps.com](mailto:sales@basf-3dps.com)

<http://www.forward-am.com/>

### **Storage Conditions and Disposal Considerations**

Keep container tightly closed in a room temperature, well-ventilated place. Keep container dry. If Material is not being used fill it back through a filter in the corresponding material bottle. The filter prevents to fill cured pieces or failed prints back into the bottle. Ultracur3D® EL 4000 must be disposed of or incinerated in accordance with local regulations.

**For more information, please refer to the country specific MSDS for advice.**

### **Delivery units**

Ultracur3D® EL 4000 is available in the following packaging sizes: 1 kg, 5 kg and possible larger volume packaging are also available upon request.

### **Intended Use**

Ultracur3D® EL 4000 is a technical material based on (meth-)acrylate resin for suggested DLP systems. Working wavelength: 385 nm or 405 nm. Attached a list of suggest 3D printer and Printing parameters. For more information contact BASF directly at [sales@basf-3dps.com](mailto:sales@basf-3dps.com).


*The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® EL 4000 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® EL 4000. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020)*

Version 0.1

### Example of Suitable 3D-Printers and Settings

| PRINTER     | STRATASYS<br>ORIGIN ONE |
|-------------|-------------------------|
| Wavelength  | 385 nm                  |
| Power       | 5 mW/cm <sup>2</sup>    |
| Curing time | 1.1 s                   |
| Voxel depth | 50 µm                   |

### Printing Process

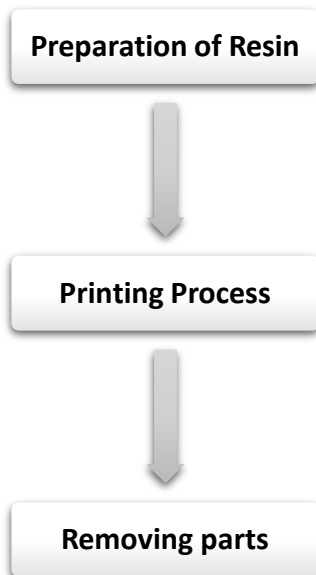

The material should be processed at room temperature. Before usage the material should be shaken well. Pour it slowly in the vat and wait a couple minutes, until smooth, bubble-free surface is obtained before starting the print job.

As the suitable 3D printer examples and setting parameters stated above are only for general guidance purpose, user should always define the optimal settings according to his needs by himself. Please refer to Instruction of Use or User Guide of the employed 3D-Printer for the printer settings and handling.

Remove the parts carefully from the build platform with a suitable tool, for more information see the Instruction for Use of the used 3D-Printer.

*The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® EL 4000 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® EL 4000. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020)*

Version 0.1

## Cleaning and Post curing process

### Cleaning Process

Ultracur3D® EL 4000 can be cleaned with a Glycol Ether based solvent like Ultracur3D® Cleaner & 2-propanol, please refer to the following cleaning procedure.

#### Cleaning with Ultracur3D® Cleaner & 2-propanol

*Step 1:* Place the parts in a container filled with Ultracur3D® Cleaner and *place this container* in an Ultrasonic bath filled with water for 8 minutes.

*Step 2:* Rinse the parts with 2-propanol for a few seconds. Fine structures or holes may be better cleaned by using 2-propanol and a syringe or by separate brushing. Next, place the parts in a container filled with 2-propanol and *place this container* in an Ultrasonic bath filled with water for 8 minutes.

*Step 3:* Blow dry the parts with pressure air/nitrogen, until the parts are clean.

### Drying

Place the parts into a warming cabinet @40°C for 30 minutes.

*The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® EL 4000 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® EL 4000. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020)*

Version 0.1

**Post curing**

Ultracur3D® EL 4000 parts require adequate post curing to achieve the optimized final mechanical properties. After each post-curing cycle, the part needs to be flipped to achieve an even curing.

Examples of post curing procedures

**Stratasys Origin One**

| Post-curing unit             | Dymax ECE 2000 flood |
|------------------------------|----------------------|
| Amount of cycles             | 2                    |
| Duration of one curing cycle | 900 seconds          |



**Finishing Process**

Remove, if necessary, support structures and smoothing the surface.

These proceedings are only general guidelines, the optimal printing settings as well as curing time must be defined by the user himself. The post-curing might differ by using different 3D-Printers and different post-curing units may require different settings.

*The data contained in this publication are based on our current knowledge and experience. They do not constitute an agreed contractual quality of the product and, in view of the many factors that may affect processing and application of our products, do not relieve processors from carrying out their own investigations and tests. The agreed contractual quality of the product at the time of transfer of risk is based solely on the data in the specification data sheet. Any descriptions, drawings, photographs, data, proportions, weights, etc. given in this publication may change without prior information. The customer and/or user is responsible to consider and respect all hazard and safety issues according to the MSDS of Ultracur3D® EL 4000 and take, implement and/or install adequate measures and precautions to avoid any personal injuries, property damages and/or environmental pollution. Therefore, BASF3D Printing Solutions GmbH shall not be liable for any personal injury, property damages and/or environmental emissions arising out of or related to the testing, handling or usage, storage and possession of Ultracur3D® EL 4000. It is the sole responsibility of the recipient of our product to ensure that any proprietary rights and existing laws and legislation are observed (02/2020)*

Version 0.1